

THIS DRAWING AND THE INFORMATION CONTAINED THEREON ARE THE EXCLUSIVE PROPERTIES OF PTL ENGINEERING INC. IT SHALL NOT BE COPIED OR DUPLICATED WITHOUT OUR WRITTEN CONSENT

B	1-31-23	ADD JAMB LOCATION DRAWING
A	8-19-19	REVISE THE MOUNTING INSTRUCTIONS
		REVISION

DOOR SIDE


REMOVE THE PDS-A-LOC FROM THE TOP OF THE DOOR.
OPTIONAL: REMOVE THE CABLE FROM THE INSIDE OF THE DOOR.

MOUNT THE PLATE ON THE TOP OF THE DOOR TRIM. IT IS MOUNTED FLUSH WITH THE OUTSIDE FLANGE OF THE TRIM (A) AND 9 3/8" FROM THE HINGE SIDE OF THE DOOR (B). THE HOLES MUST BE PRE-DRILLED IN THE ALUMINUM TRIM WITH 1/8" BIT DO NOT PRE-DRILL THE STEEL TUBE.

MOUNT THE SCREWS IN THE MIDDLE OF THE 2 SLOTS FIRST (C). THIS IS SO THAT YOU CAN ADJUST THE PLATES IF NECESSARY. AFTER THE FINAL ADJUSTMENTS ARE MADE YOU CAN INSTALL THE LAST 6 SCREWS (D).

JAMB SIDE

MOUNT THE PLATE ON THE INSIDE OF THE DOOR JAMB. IT IS MOUNTED 7/16" FROM THE INSIDE FLANGE OF THE JAMB (E) IT IS 11" FROM THE HINGE SIDE OF THE JAMB (F). MOUNT THE SCREWS IN THE MIDDLE OF THE 2 SLOTS FIRST (G). THIS IS SO THAT YOU CAN ADJUST THE PLATES IF NECESSARY. AFTER THE FINAL ADJUSTMENTS ARE MADE YOU CAN INSTALL THE LAST 5 SCREWS (H).

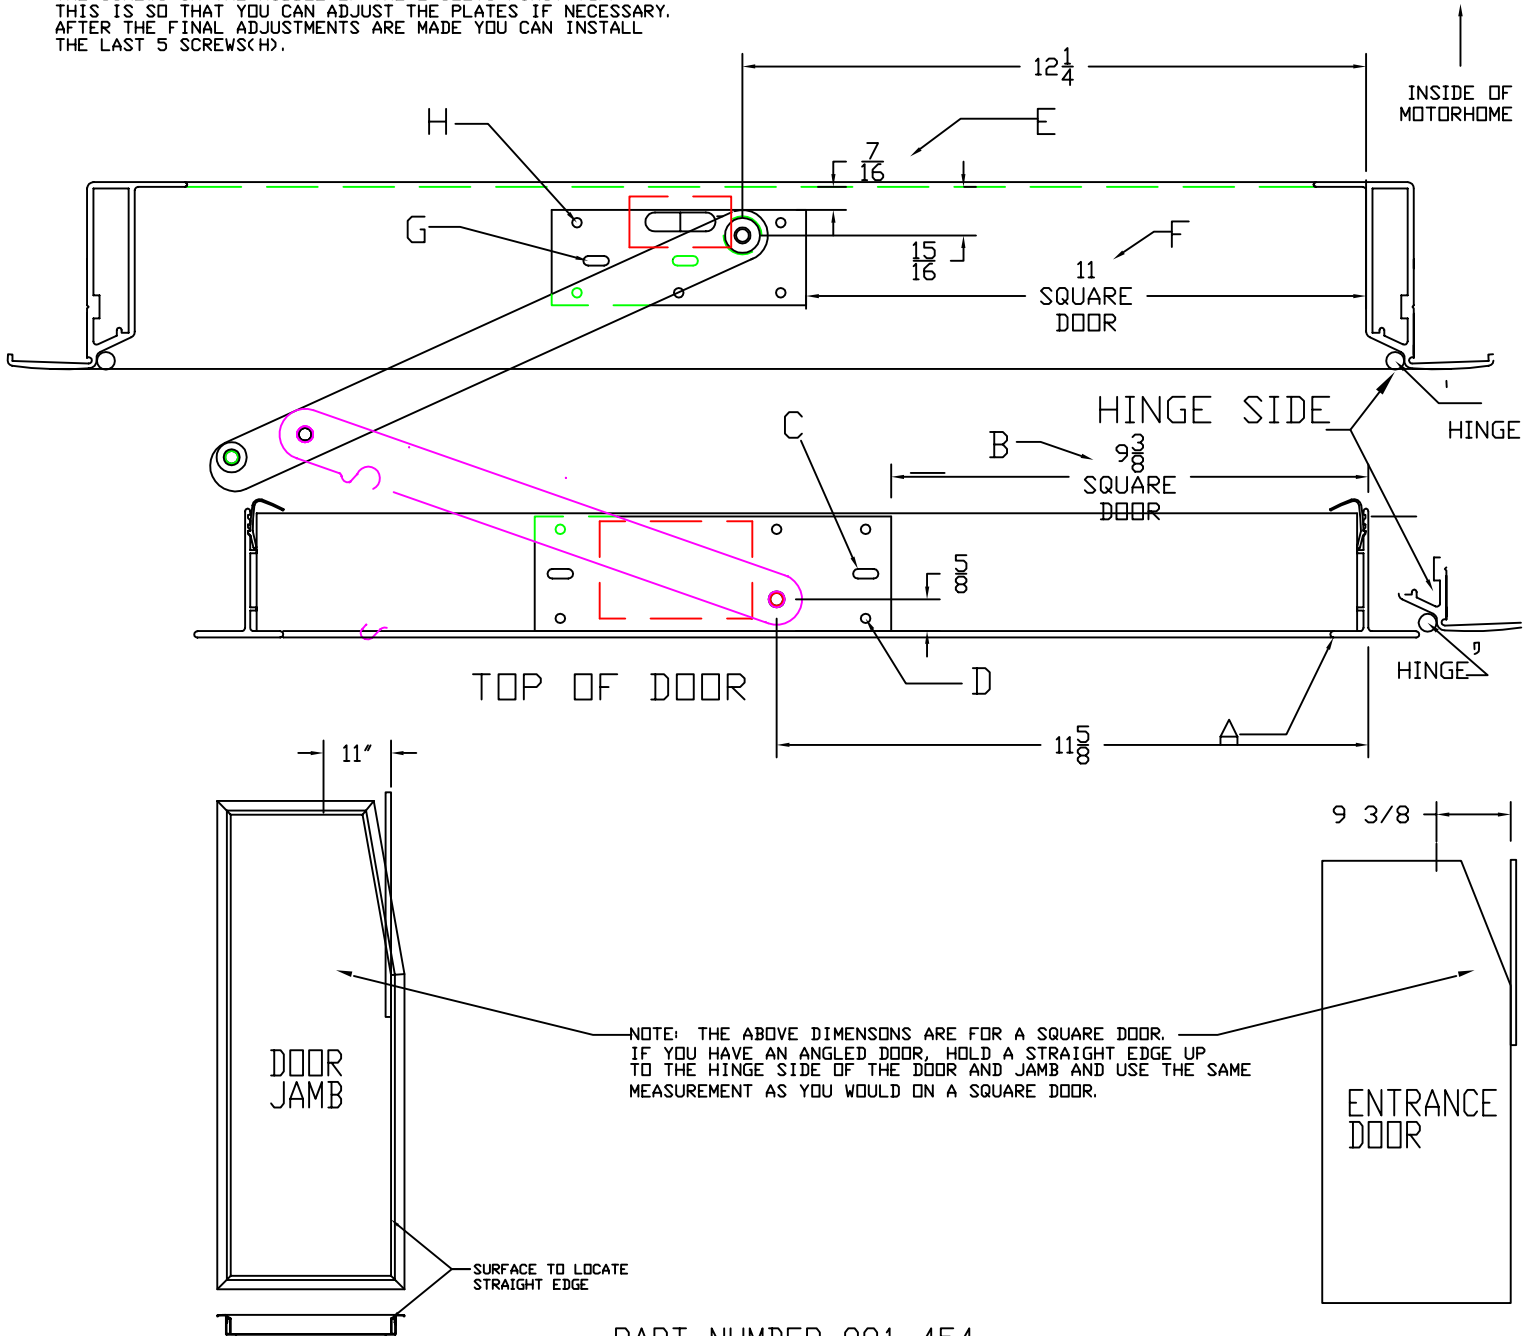

PART NUMBER 001-454

DESIGNED BY:	DATE:	P. T. L. ENGINEERING	DESCRIPTION
DRAWN BY: C. EDWARDS	DATE: 8-25-16	3333 JOHN CONLEY DR. LAPEER, MI 48446	DOOR CHECK MOUNTING LOCATIONS
CHECKED BY:	DATE:	CUSTOMER INFO.: ALL	DRAWING NO.
SCALE	SHEET NO. OF SHEETS		3000 series replacement